


Gielle Thrust Bearings
INSTALLATION INSTRUCTIONS

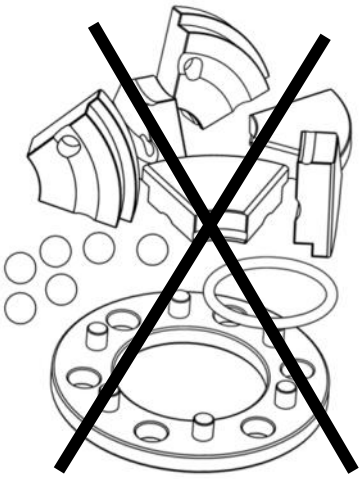


Eliminate

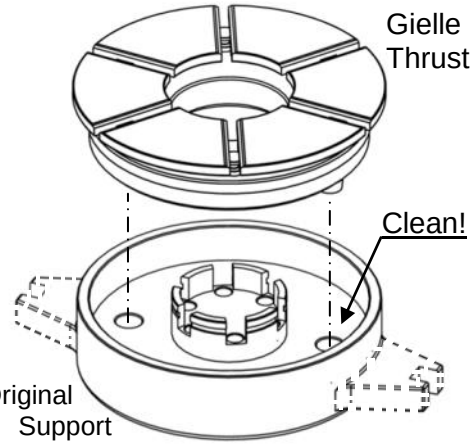

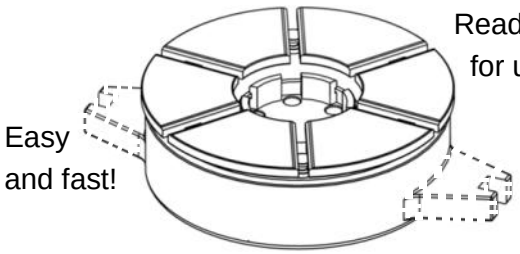

Gielle Thrust Bearings
INSTALLATION INSTRUCTIONS

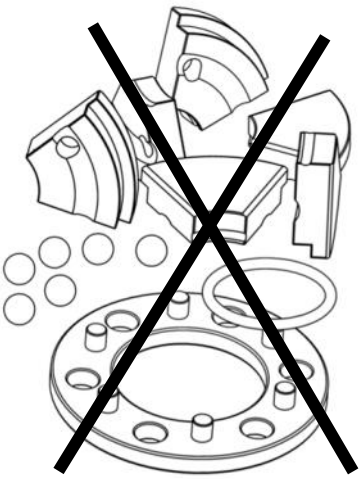

Eliminate

